

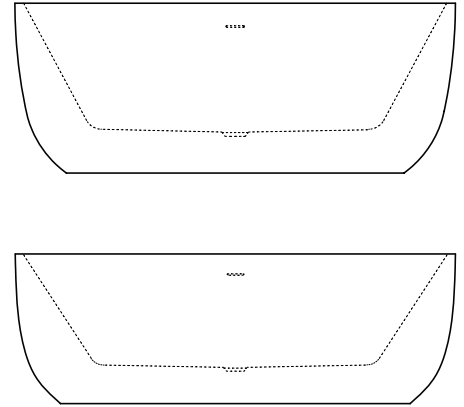
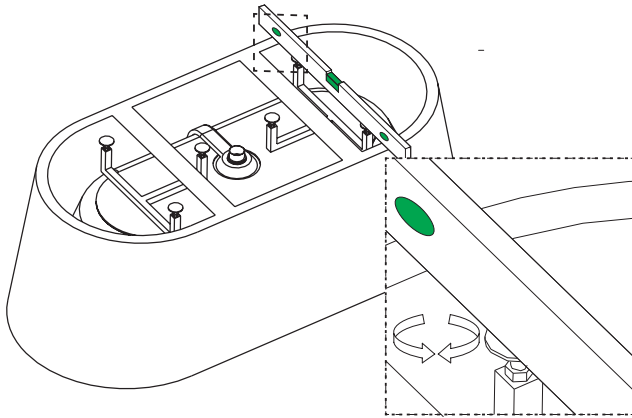


# ARKILIFE NOMI AN150 ARKILIFE NOMI AN170 BATHTUB

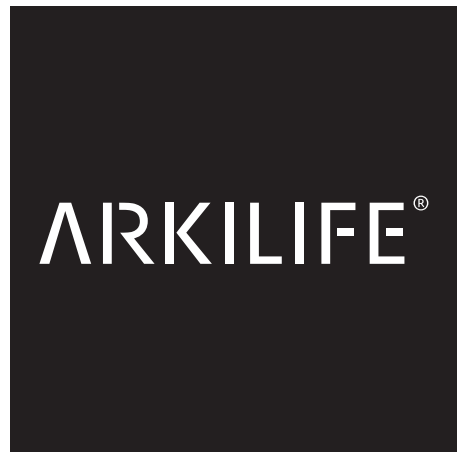


## INSTALLATION INSTRUCTIONS

- 1**  Assemble bath on a mat to protect against damage to bath surface.




Ensure legs are adjusted in line with the base of bath.

**2**

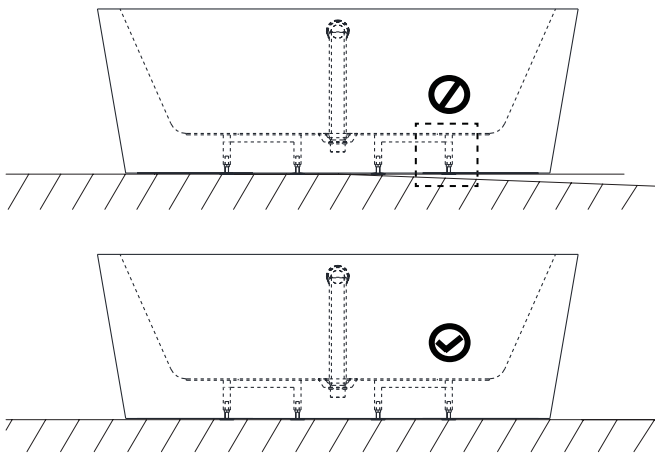



Check that bath sits flat;  
if required adjust legs to compensate for floor level.

**2a**

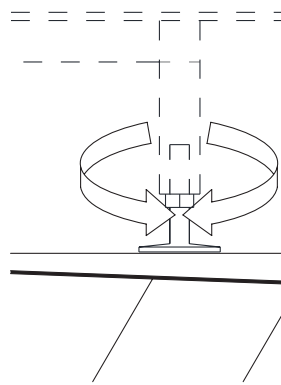


**2b**

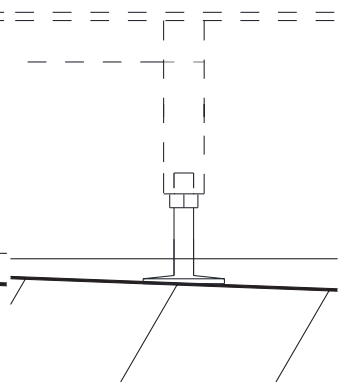


 Before step 3 set waste connection in position.

3

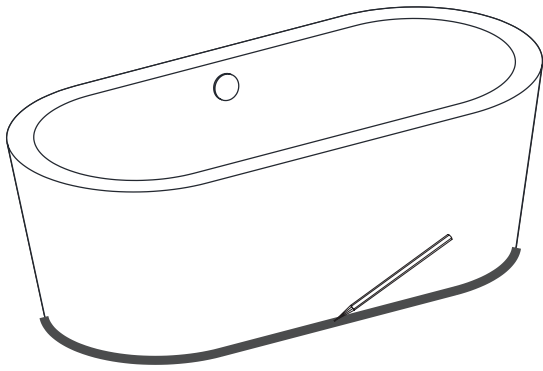

With pencil trace outline of bath.

4

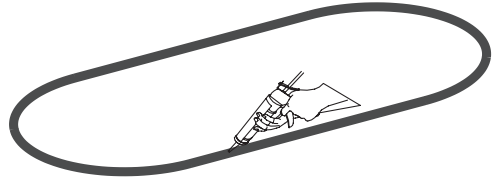


Apply a thick bead of silicone within bath outline.

5



To use in 24 hours after installation.

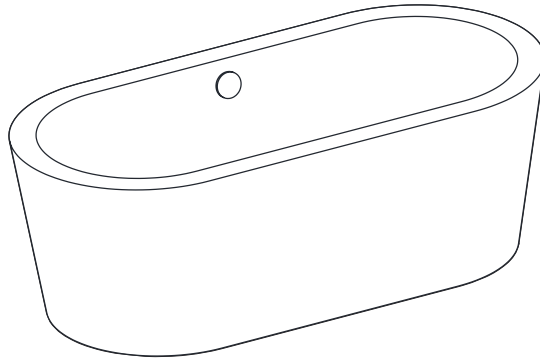

Set bath in final position.

Suggested Skirted Bath Install Method Other methods be adopted pending type of installation

